


CLOUDMASTER

60 Hz Decoder System with Isolated Power Supply & Lightning Protection

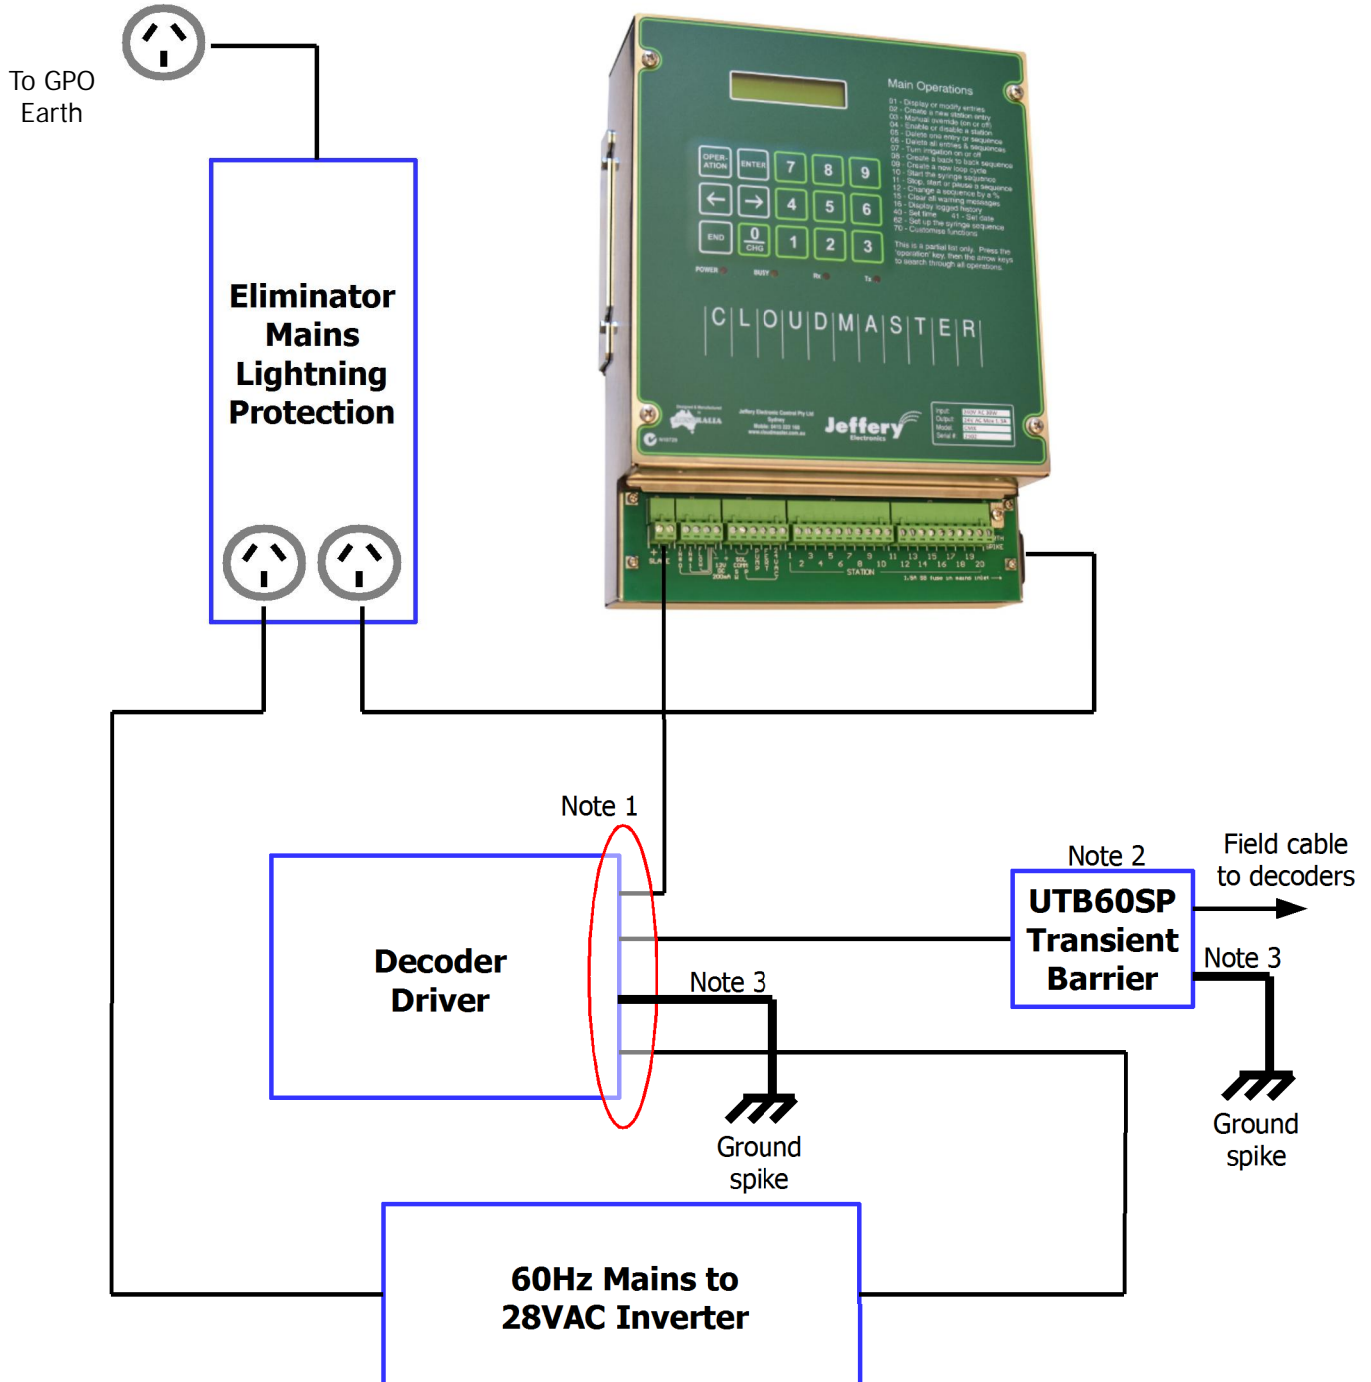

Notes:

1. Refer to Cloudmaster manual page 44 for connection details.
2. Locate UTB60 transient barrier as close as possible to the earth spike. Typically where the field cable enters the building.
3. Minimum 6mm wire to ground spike